


INSTALLATION - LATERAL CONNECTOR LTC



A. Drill hole 90° to pipe axis

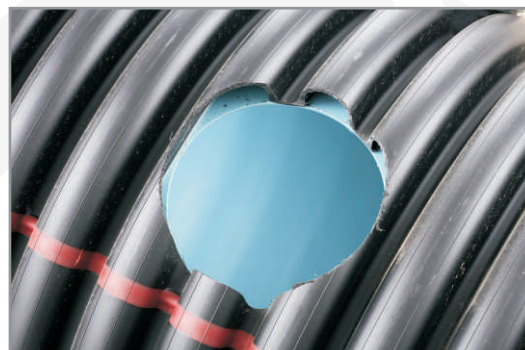


B. Clean and file drill hole



C. Press LTC into socket



D. Pull LTC up until bottom flange is tight against inside wall pipe

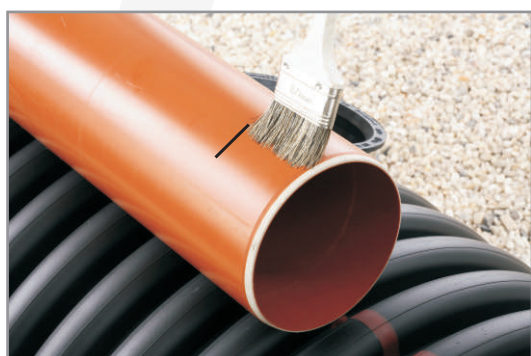

E. Mark incoming lateral pipe, according to insertion depth. Lubricate pipe and LTC.



F. Now press pipe down to lowest stop (mark disappears), tighten the clamp to 6 Nm

DN/OD (mm)	Core Drill (mm)	Insertion Depth (mm)
110	127	80
125	142	80
160	177	80
200	217	115

Mücher - Hole Saw

